ADDENDUM To CSAFE Kit
Installation Instructions

ATTENTION INSTALLERS!
CSAFE Communication Board Installation

This addendum is to be used in conjunction with the enclosed CSAFE Installation Instruction Kit.
The CSAFE Board and its Components are identical with the CSAFE Installation Kit except as follows.

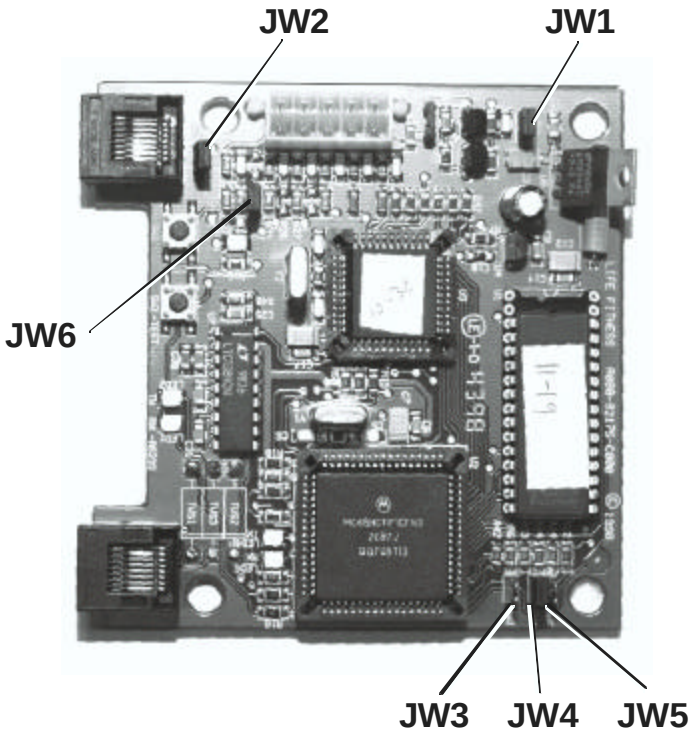

JUMPER CONFIGURATION TABLE			
Jumpers	**Circuit**	**Life Cycles Rear-Drive Cross-Trainer**	**Cross-Trainer, Treadmills, and Stairclimbers**
JW1	**IN**	**OUT**	**IN**
JW2	**IN**	**OUT**	**IN**
JW3	**OUT**	**OUT**	**OUT**
JW4	**IN**	**OUT**	**OUT**
JW5	**OUT**	**OUT**	**OUT**
JW6	**IN**	**IN**	**IN**

1. Make sure the CSAFE Board Jumpers are configured according to the JUMPER CONFIGURATION TABLE.
2. The CSAFE Board has two(2) RJ45 Connectors connected in parallel. Install the 3 ft. CNA Cable in either RJ45 port.
3. Route and locate the other end of this cable outside the shroud to where the CNA will be mounted.